




Installing the Power Supply Housing on the Chuck-A-Luck

To protect the power supply and the operator, Arachnid has developed a power supply housing for the Chuck-A-Luck. The installation instructions are listed below.


Qty	Description	Part Number
3	Metal Standoff	42441
1	Plastic Standoff	42440
1	Power Supply Housing	42439

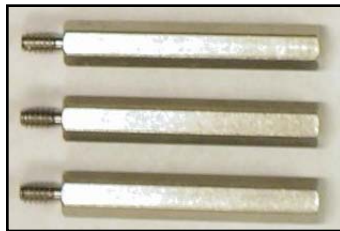

Metal Standoff





Plastic Standoff

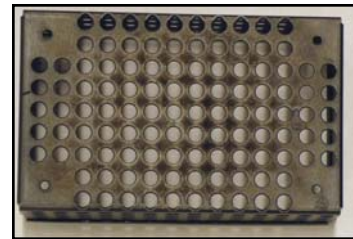

Power Supply Housing



1. Unplug power from the Chuck-A-Luck.
2. Open the lid to the Motor Enclosure. The power supply is located on the lid.

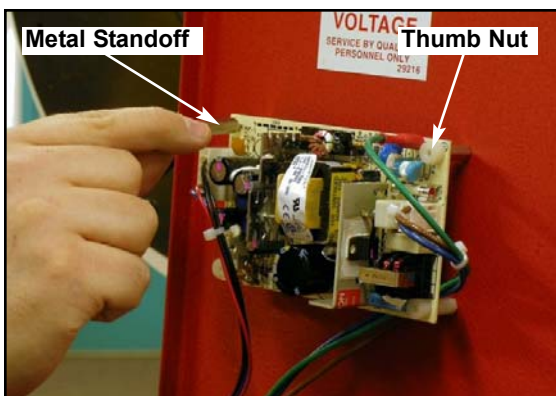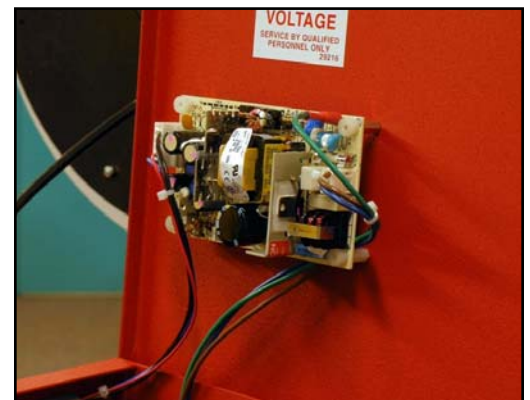

3. Remove the finger nut on one of the metal standoffs that secure the power supply to the lid.
4. Replace it with a metal standoff provided.
5. Repeat steps 3 and 4 for the other two metal standoffs.

6. Remove the finger nut to the plastic standoff that secures the power supply to the lid.
7. Replace it with the plastic standoff provided.

Caution: Finger tighten only. If tightened to tight the plastic standoff may break.

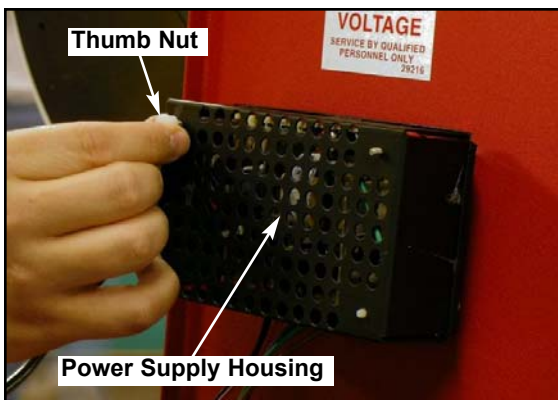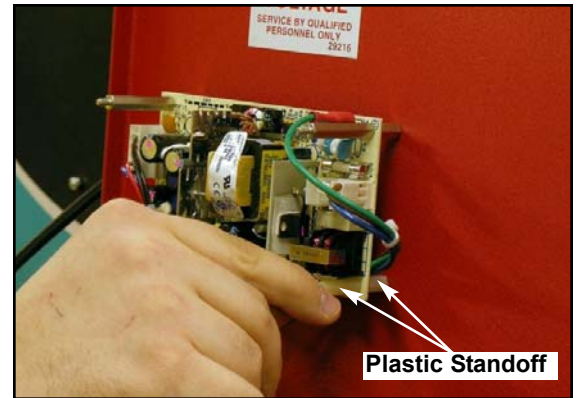

8. Attach the housing to the new standoffs using the four finger nuts.